



# **2-Port Serial (RS-232) PCI Host Card**

## **User Manual**

### **Model: UGT-PC20SR**

**All brand names and trademarks are properties of their respective owners  
[www.vantecusa.com](http://www.vantecusa.com)**

# Contents

Features and Benefits .....	3
System Requirements .....	3
Package Contents.....	3
Hardware Installation.....	3
Driver Installation .....	4

## Features and Benefits

- Compliant with PCI Local Bus Specification, Revision 2.3
- Support 2 x UART serial ports
- Easy Plug and Play
- Automatic selects IRQ & I/O address
- Built-in 16C450/550 compatible UART
- On chip 256 byte FIFOs for transmit/receive
- Serial data transfer rate up to 115200bps
- PCI 32-bit
- 2 x DB9 male serial connectors

## System Requirements

- Windows XP/Vista/7/8 (32/64 bit)
- Available PCI slot

## Package Contents

- 1 x 2-Port Serial (RS232) PCI Host Card
- 1 x Driver CD
- 1 x User Manual
- 2 x Low Profile Brackets

## Hardware Installation

1. Turn off the power to your computer.
2. Unplug the power cord and remove your computer's cover.
3. Remove the slot bracket from an available PCI slot.

4. To install the card, carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Secure the computer cover and reconnect the power cord.

## Driver Installation

1. Insert the provided CD into your CD-ROM drive.
2. At the Windows Desktop, click **Start**, and then **Run**.
3. When the prompt displays  
For Windows XP/Vista/7/8 32-bit – Enter “**D:\UGT-PC20SR\Windows\32Bit\PCISetup.exe**” (where “D” is the designation of your CD drive)  
For Windows XP/Vista/7/8 64-bit – Enter “**D:\UGT-PC20SR\Windows\64Bit\PCISetup.exe**” (where “D” is the designation of your CD drive)
4. Follow the on-screen instructions to complete the installation.