



- 1) Connect and power on the enclosure
- 2) Run upgtool.exe

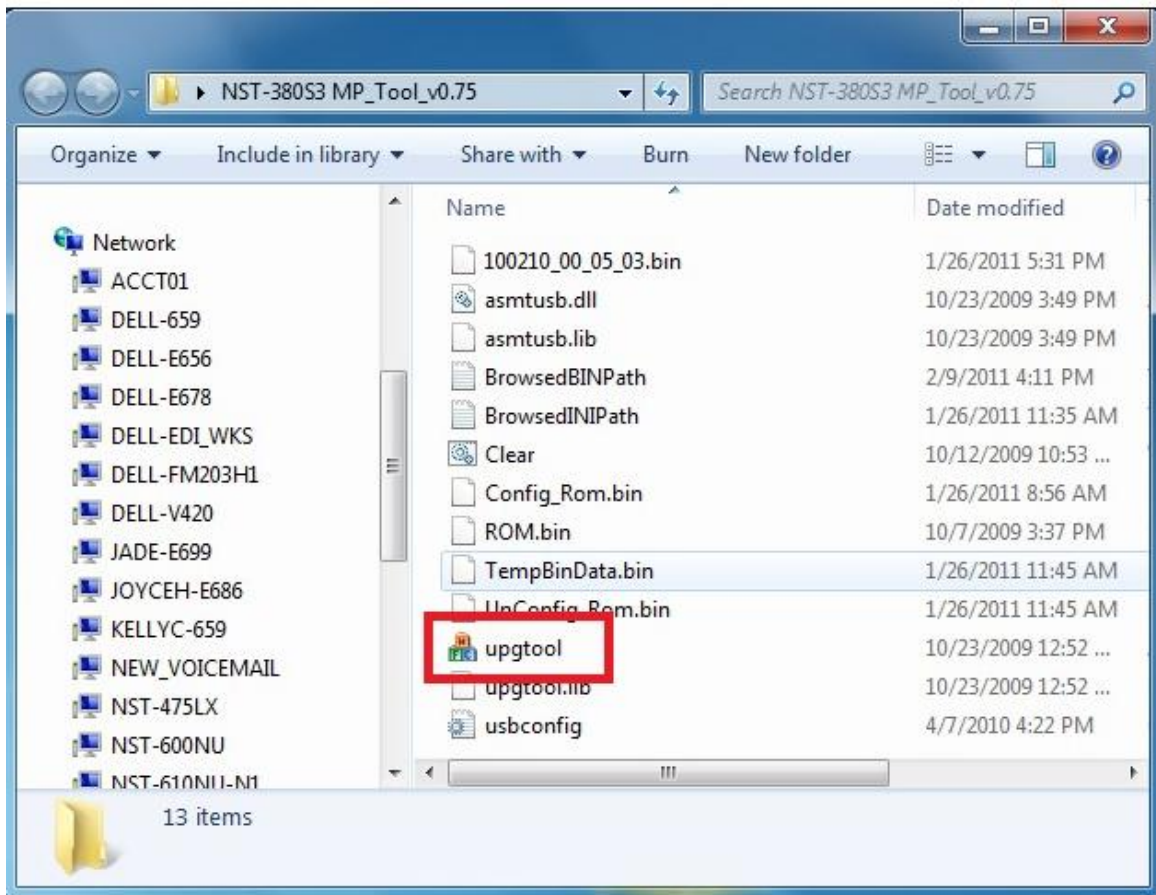

3) Browser and load the firmware file 110311_01_05_06.bin

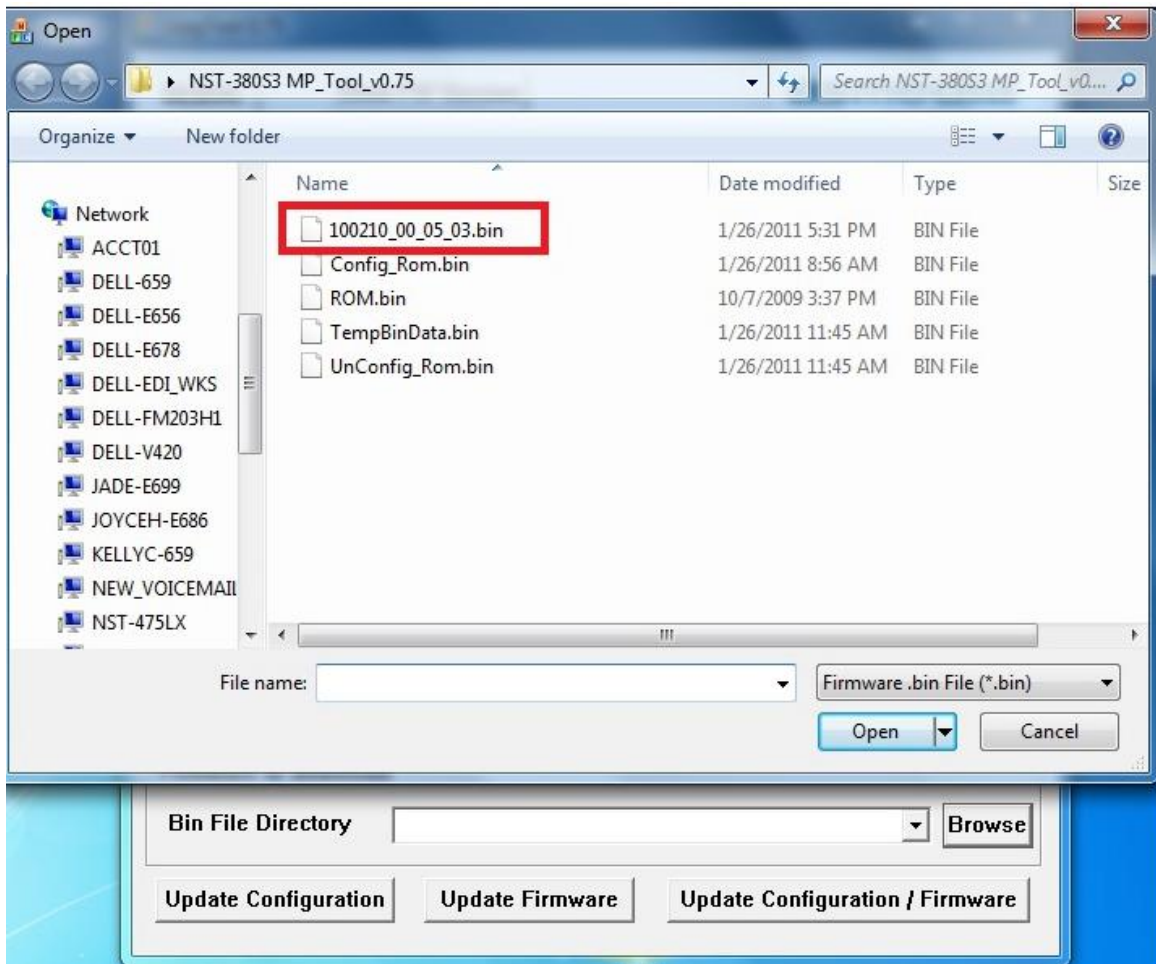

4) Make sure file is uploaded in the Bin File Directory and click Update Firmware

UpgTool 0.75

DEBUG Show FW Version asmedia 祥碩科技

Configuration to download

ini File Directory Browse

Vendor ID Load

Product ID

Device Revision

Language ID

Serial Number

Manufacturer String

Product String

Clear

Save and Load

Firmware to download

Bin File Directory Browse

Update Configuration Update Firmware Update Configuration / Firmware

5) OK to continue



- 6) OK to finish and now firmware has been updated
Please power cycle the enclosure

