



NST-266SU3 / NST-366SU3 Disable Firmware Update Instruction

1. Plug NST-266SU3 or NST-366SU3 to a USB port
2. Unzip JMS565_NO_PM.zip to your desktop
3. Check "RD Version" and you should get a popup box, enter jmicron to unlock

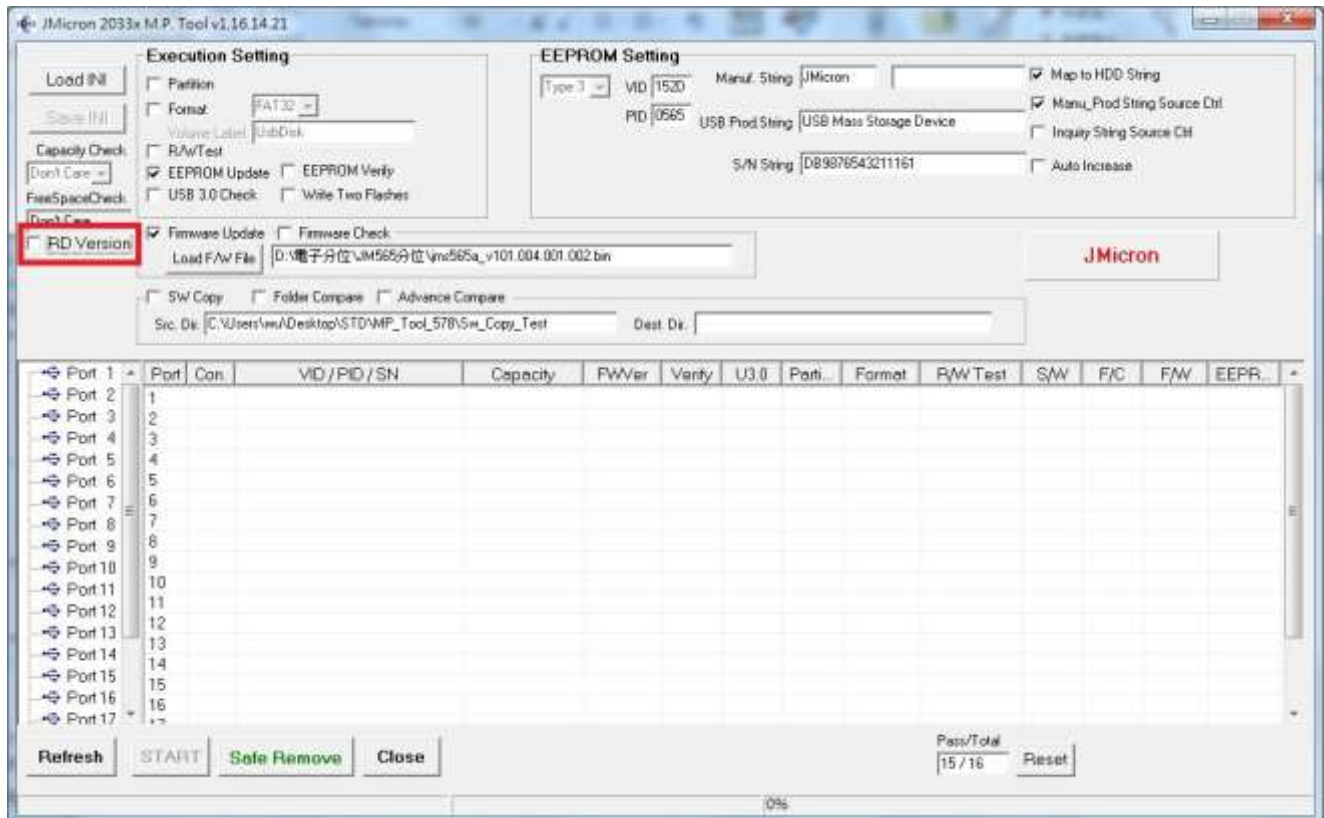

4. Check **EEPROM Update** and **Firmware Update**

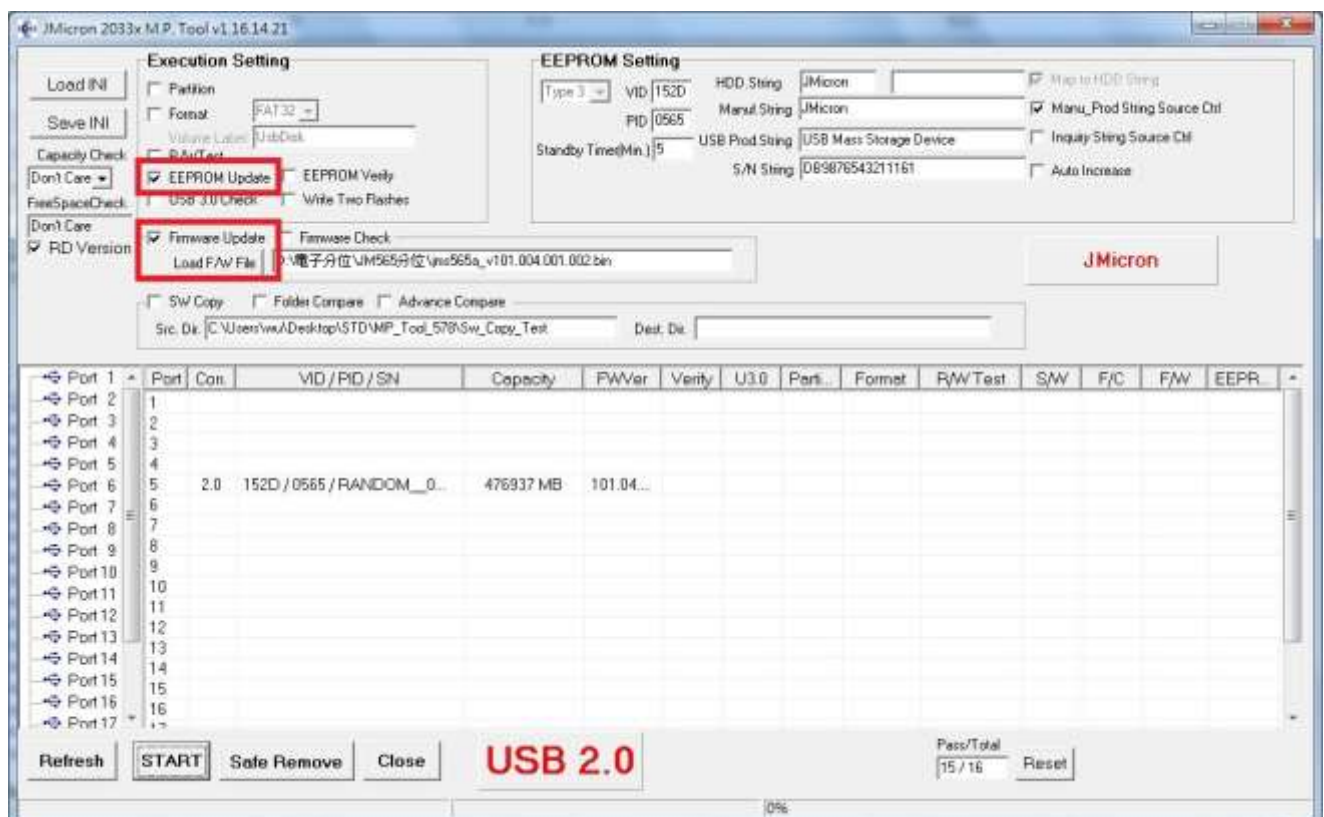

5. Click Load F/W File box, browse and select **jms565a_ATEC_HDA318J3C_v101.004.001.004.bin**
6. Click **START** to proceed firmware update
7. When **PASS** prompt the firmware update is completed

