
Installation Guide



💶 🚺 . Verify the package contents.






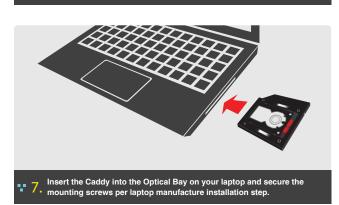









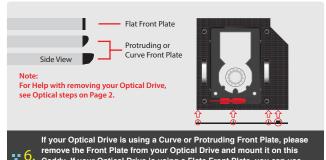

If your Optical Drive is using a Curve or Protruding Front Plate, please remove the Front Plate from your Optical Drive and mount it on this Caddy. If your Optical Drive is using a Flate Front Plate, you can use the provided Flate Front Plate to mount onto this Caddy.

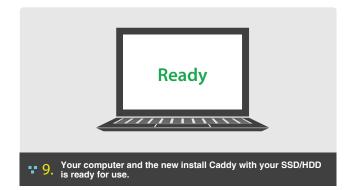



The following instructions serve as a guide to remove an Optical drive from a laptop computer. Every laptop manufacturer designs their laptop differently and this example may not reflect layout of the many laptops available or the one that you may have.

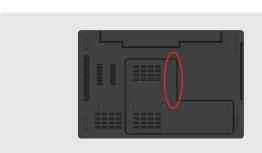

There is always one screw used to secure the Optical Drive so that


the drive will stay secure in the laptop. This screw is located often on the rear of the drive in this area shown.

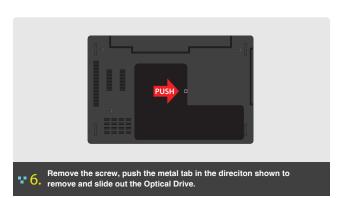

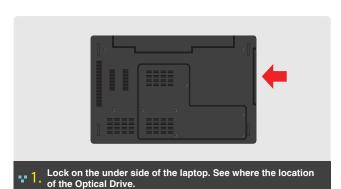






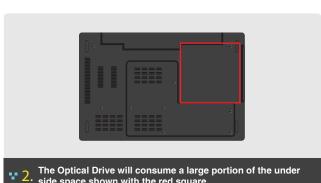

The Optical Drive will consume a large portion of the under side space shown with the red square.

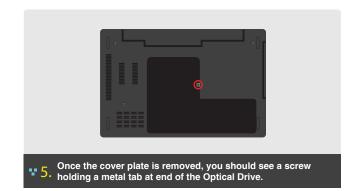

If you are still having problem removing the Optical Drive, please contact laptop manufacturer for further instruction.