



# **1-Port Parallel PCIe Host Card**

## **User Manual**

**Model: UGT-PCE10PL**

**All brand names and trademarks are properties of their respective owners  
[www.vantecusa.com](http://www.vantecusa.com)**

# Contents

Features and Benefits.....	3
System Requirements .....	3
Package Contents.....	3
Hardware Installation .....	3
Driver Installation.....	4

## Features and Benefits

- Compliant with PCI Express Specification 1.1
- Supports x1, x4, x8, x16 PCI Express Bus
- Add one IEEE 1284 Parallel Port on system
- Supports Standard Parallel Port (SPP), Enhanced Parallel (EPP) & Enhanced Capability Port (ECP)
- Faster data rates up to 1.5Mbytes/sec
- Plug-n-Play, I/O address and IRQ assigned by BIOS
- Support Windows XP/Vista/7/8

## System Requirements

- Windows XP/Vista/7/8 (32/64 bit)
- One available PCI Express slot

## Package Contents

- 1 x 1-Port Parallel PCIe Host Card
- 1 x Driver CD
- 1 x User Manual
- 1 x Low Profile Bracket

## Hardware Installation

1. Turn off the power to your computer.
2. Unplug the power cord and remove your computer's cover.
3. Remove the slot bracket from an available PCIe slot.

4. To install the card, carefully align the card's bus connector with the selected PCIe slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Secure the computer cover and reconnect the power cord.

## Driver Installation

1. Place the Driver CD into the CD-ROM drive. Click the **Start** button on the taskbar and click **Run**. Type "**D:\UGT-PCE10PL\Windows\Setup.exe**". (Assuming you have placed the CD in CD-ROM drive labeled as D).
2. Follow any on-screen instructions to complete the software installation.
3. Restart your system.
4. Once you have rebooted the computer, this 1-Port Parallel PCIe Host Card is ready to be used.