



2-Port Serial (RS-232) PCIe Host Card

User Manual

Model: UGT-PCE20SR

**All brand names and trademarks are properties of their respective owners
www.vantecusa.com**

Contents

Features and Benefits	3
System Requirements.....	3
Package Contents	3
Hardware Installation.....	3
Driver Installation	4

Features and Benefits

- Compliant with PCI Express Specification 1.1
- Supports x1, x4, x8, x16 PCI Express Bus
- Support 2 x UART serial ports
- Built-in 16C950 compatible UART
- 128-byte FIFO for transmit/receive per port
- Data transfer rate up to 230400bps
- Plug-n-Play, I/O address and IRQ assigned by BIOS
- Support Windows XP/Vista/7/8

System Requirements

- Windows® XP/Vista/7/8 (32/64 bit)
- One available PCI Express slot

Package Contents

- 1 x 2-Port Serial (RS-232) PCIe Host Card
- 1 x Driver CD
- 1 x User Manual
- 2 x Low Profile Brackets

Hardware Installation

1. Turn off the power to your computer.
2. Unplug the power cord and remove your computer's cover.

3. Remove the slot bracket from an available PCIe slot.
4. To install the card, carefully align the card's bus connector with the selected PCIe slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Secure the computer cover and reconnect the power cord.

Driver Installation

1. Place the Driver CD into the CD-ROM drive. Click the **Start** button on the taskbar and click **Run**. Type "**D:\UGT-PCE20SR\Windows\Setup.exe**". (Assuming you have placed the CD in CD-ROM drive labeled as D).
2. Follow any on-screen instructions to complete the software installation.
3. Restart your system.
4. Once you have rebooted the computer, this 2-Port Serial (RS-232) PCIe Host Card is ready to be used.