


Fan replacement for NST-387S3-BK

Remove HDD from the Tray.

Note the screws holding the FAN (2 screws on the underside) and the Printed Circuit Board (2 screws)

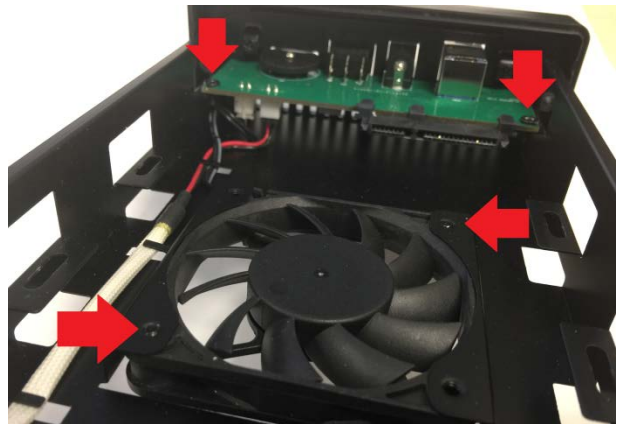

Remove the two screws holding the Printed Circuit Board first. Loosen the PCB and flip over to see the fan connector.



Remove the FAN connector and loosen the fan cable latch to the tray.



Turn over the Tray and remove the two screws holding the FAN.

To install the FAN back reverse the steps mention above.

