



## Please follow the instructions very closely

- 1) Unzip the Vantec\_1610P\_v204rc02.zip
- 2) Install the INI\_FCFG\_3.29.exe (flash program)
- 3) Run the MTPWIN – Manufacturing Test Program

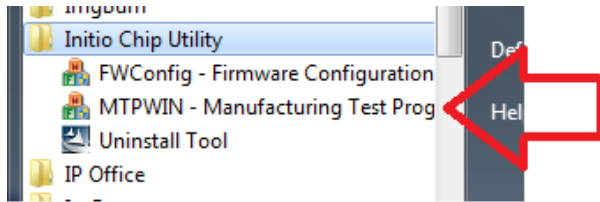

- 4) Follow the steps #1 to #4 in RED.

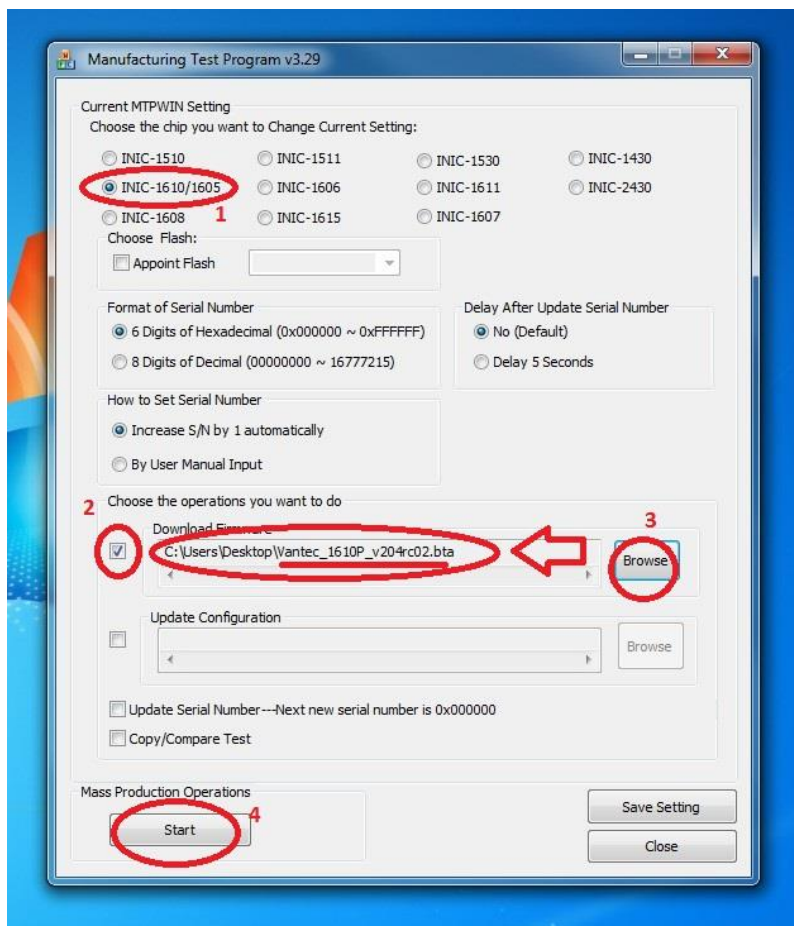

- 5) Once the update has been completed (DO NOT close this program, it is needed for the next step)
- 6) Please disconnect the USB cable from the back of the unit. (DO NOT power OFF the unit, leave it ON)  
Wait 5 seconds and then reconnect the USB cable back into the unit.
- 7) The program should automatically rerun the update again.
- 8) Once the second pass has been complete, the unit is now fully updated
- 9) You may now close the program and power OFF the unit.
- 10) Done.